

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 642-5505  
www.Dawn-Ent.com

## INSTALLATION INSTRUCTIONS

PART NUMBER: LCM-RDX-26-5-6  
FOR: 2008 & Up Acura RDX  
EFFECTIVE: 04 APR 2011


### PARTS INCLUDED WITH INSTALL LOCATION:

- #26 (LABELED ON BACK OF PART) – 2 PIECES (DRIVER AND PASSENGER FRONT)
- #5 (LABELED ON BACK OF PART) – 1 PIECE (PASSENGER REAR)
- #6 (LABELED ON BACK OF PART) – 1 PIECE (DRIVER REAR)

### PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION** (See *Diagram below*):  
Run masking tape **as shown using measurements in Diagram A** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.
2. **CLEAN AND PREP:**  
Clean the surface where the molding is to be installed using the alcohol pads enclosed for proper installation of Lower Chrome Molding. Wipe off excess residue with a clean cloth. Next, apply **PRO-BOND ADHESIVE PROMOTOR** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator “crush”. The applicator will become wet on the end and is ready for use. Apply a thin coat of **PRO-BOND** below the masking tape line, only on the shaded area, **as shown in Diagram A above**. Do not apply **PRO-BOND** in any area that the molding will not cover, as **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun or hair dryer to warm before proceeding with installation.

DIAGRAM B

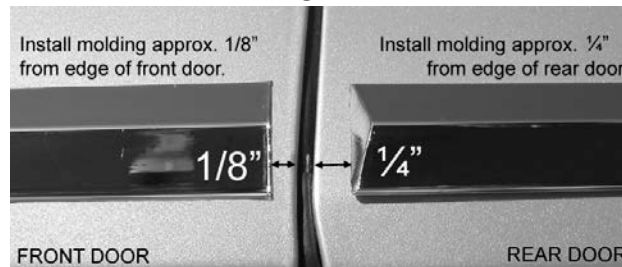


3. **INSTALLATION (IMPORTANT):**  
**Before starting, see Diagram B** as to where to start applying molding. Next, completely peel off all of the liner from back of molding, making sure die cut ends of red liner are also removed from molding. **DO NOT TOUCH** the exposed adhesive with your fingers as the installation is being done.  
  
Since these moldings have been pre-cut, start adhering moldings rear piece first with the angle or bevel cut first and the finished end directed toward the rear wheel well. Next, install front door molding **following Diagram B** measurements.
4. **AFTER THE MOLDING** has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion.



# DIAGRAM A

2007-2012

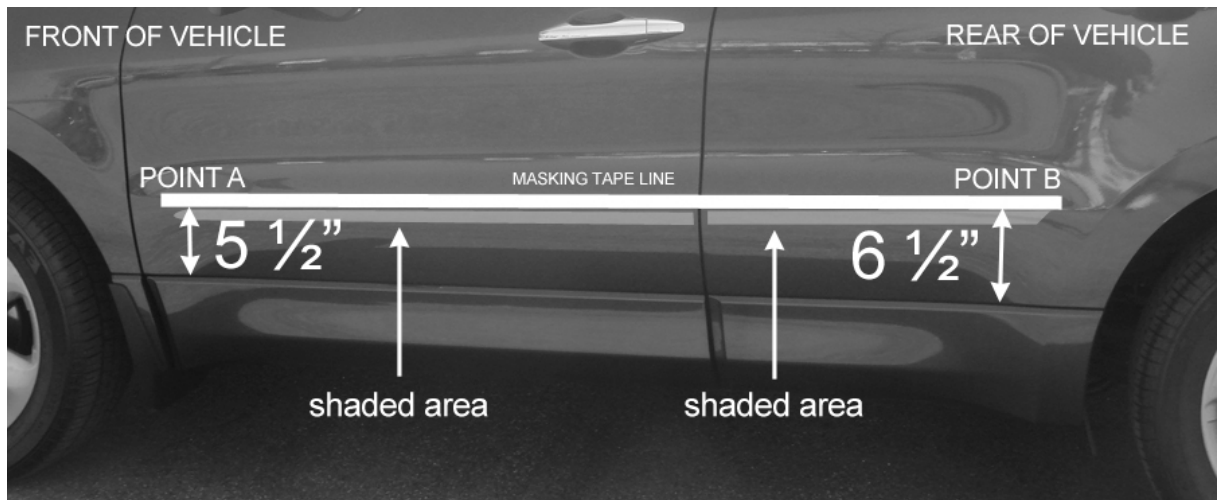

Measure up from top of cladding

2013+

