

DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125
Phone: (216) 447-1777 or (800) 548-4867
Fax: (216) 447-3416
www.dawn-ent.com

INSTALLATION INSTRUCTIONS

PART NUMBER: FE-MDX
FE-MDX08
FOR: 2008 + Acura MDX
2001 – 2007 Acura MDX
EFFECTIVE: 07.07.08

PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION

1. **LOCATION** (See Diagram below):
Using masking tape, run the tape **as seen in Diagram below** from POINT A to POINT B. Press tape against the vehicle, making sure that the tape is straight from POINT A to POINT B.


2. **CLEAN AND PREP:**
For proper installation of Custom Body Side Molding, clean the surface where the molding is to be installed using the alcohol pads enclosed. Wipe off excess residue with a clean cloth. Apply **PRO-BOND ADHESIVE PROMOTER** in the crush swab self-applicator. Squeeze the applicator until you feel the applicator “crush”. The applicator will become wet on the end and is ready for use. Quickly apply a thin coat of **PRO-BOND** below the masking tape line, no further than 1 ¼” below the tape. Be careful not to go lower than 1 ¼” because **PRO-BOND** could dull the paint surface. The light coat of **PRO-BOND** will dry quickly. Where cooler temperatures prevail, make sure the molding is at room temperature. The recommended metal surface temperature of the vehicle should be at least 75°F/24°C for proper installation. If the surface is cold, use a heat gun to warm before proceeding with installation.

3. **INSTALLATION:**
BEFORE STARTING, peel back 12” of the red liner, removing the rest of the liner as you install. **DO NOT TOUCH THE EXPOSED ADHESIVE** with your fingers as the installation is being done (**NOTE: excess skin oil will affect adhesion**).

Moldings have been made with either a bullet end or a slant end. If slant end, be sure to put long side on top. Start adhering moldings front and rear, with the straight cut edges first and the bullet/angle side directed toward the appropriate wheel well adhered last.

APPLYING THE MOLDING using the bottom edge of the masking tape as your guide, peel the rest of the red liner as you go.

AFTER THE MOLDING has been installed, use a soft cloth and apply pressure along the entire length of the molding to insure proper adhesion. Remove masking tape and you will have an OEM style Custom Body Side Molding that will give you many years of protection.

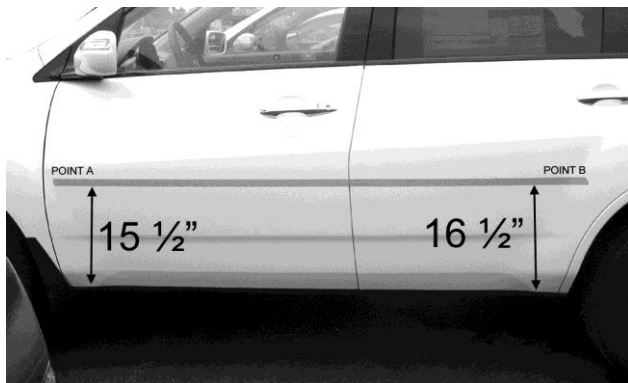

2008 & Up Model



2001 – 2007 Model

IMPORTANT! When installing the Rear Door Molding with the bevel cut, start the molding approximately ¼” from the edge of where the rear door starts. When installing the Front Door Molding with the straight cut, start molding approximately 1/8” from where the edge of the door starts.