

## DAWN ENTERPRISES INC.

9155 Sweet Valley Dr., Valley View, OH 44125  
Phone: (216) 447-1777 or (800) 548-4867  
Fax: (216) 447-3416  
www.dawn-ent.com

## INSTALLATION INSTRUCTIONS SS/C

PART NUMBER: LANCER08  
FOR: 2008 + Mitsubishi Lancer  
EFFECTIVE: 04.21.08

### INSTALLATION PACKAGE INCLUDES:

- A) 4 – M6 x ¾" Mounting Screws
- B) 4 – Lock Washers
- C) 4 – Flat Washers
- D) 2 – Templates – 1 for drivers' side – 1 for passenger side
- E) Adhesive Pads (*for unpainted Sportwing®*)
- F) Instruction Sheet

### **PLEASE READ ALL INSTRUCTIONS BEFORE BEGINNING INSTALLATION**

***See DIAGRAM C on back of page before beginning installation!!***

1. **See Diagram A below.** Along the drivers' side, measure down **3 7/8"** from the tip of the trunk lid, back towards the rear of the car, and make a mark with a grease pencil. Repeat procedure on other side.
2. Leaving paper liner on bottom of mounting feet, place the Sportwing® on the marks made in Step #1 so that as you face the rear of the car, the front tips of the Sportwing® rests on the marks. **See Diagram A below.** Center the Sportwing® exactly from left to right. Using a yellow grease pencil, outline both outside mounting feet. Set Sportwing® aside.
3. Close the trunk. Starting on the drivers side, measure down **7"** from the front corner of the trunk lid where it meets the rear window glass and make a mark, **see Diagram B on back of sheet.** Repeat procedure on passenger side.
4. Line up the drivers' side template, provided, with the edge of the trunk at the **7"** mark, **see Diagram B on back of sheet.** Tape template in place using masking tape. Next drill a 1/8" or similar pilot hole through the exact center of the fastening hole spots on the template, through the top panel of the deck lid. Next, using a uni-bit (**NOTE: we suggest using a uni-bit for a cleaner cut**) you will need to open the 1/8" pilot holes that you just made to 3/8". Repeat procedure on passenger side using the passenger side template, provided.
5. Apply Zinc Chromate Primer or touch-up paint on the edges of the four (4) 3/8" holes that you drilled in the deck lid.
6. Close the deck lid. Remove the paper liner from the bottom of the mounting feet and lightly tack the Sportwing® back onto the outline marks that you made in Step #2. Holding onto the Sportwing®, lift the deck lid and check to see that the four (4) 3/8" holes that you made in the deck lid are aligned with the four (4) threaded sleeves on the bottom of the mounting feet. If aligned, press Sportwing® firmly into place. If holes need to be re-aligned, carefully lift the Sportwing® and re-align until you are able to thread screws into threaded sleeves. Using mounting screws with lock washers and flat washers, provided, partially tighten all four (4) screws. When all four (4) screws are started, tighten evenly until tight. **DO NOT OVER TIGHTEN.**
7. Clean up any metal shavings that may have fallen into the trunk and you are done. If you have any questions, problems or if you would like information about other quality Sportwing® products, please call the TOLL FREE number at the top of this sheet. Thank you for choosing Dawn Enterprises Inc.

DIAGRAM A

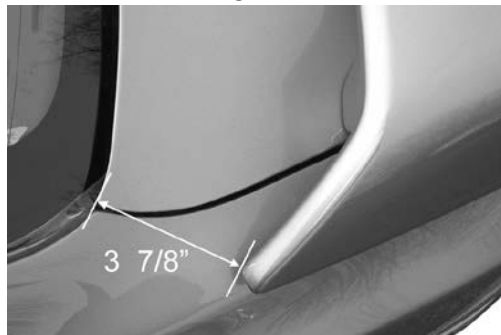


DIAGRAM B

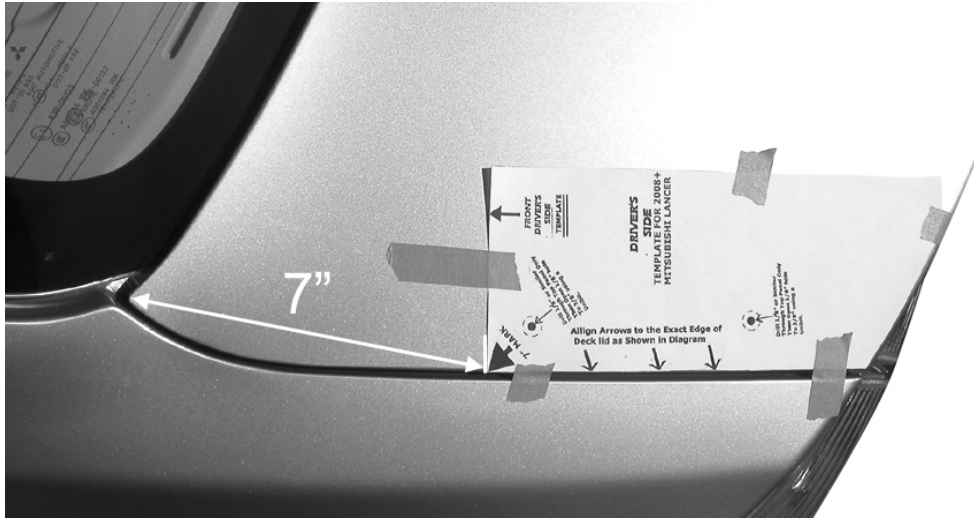


DIAGRAM C



**IMPORTANT!!**

Do not drill these holes from inside of the deck lid. Drilling through these factory holes will not align with threaded sleeves in bottom of the Sportwing®. Use templates, provided. Close the deck lid and drill down through the top panel of the deck lid.